Hanse 430, 470, 540 Jefa steering system manual




IEFA STEERING ApS 2670 GREVE. DENMARK

Tlf: +45 4615 5210 Fax: +45 4369 5211

Email: info@jefa.com www.jefa.com


2)

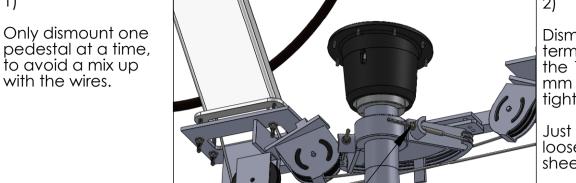

Wire terminal

Dismount wire terminal by removing the 10mm nut (17 mm wrench) used for tightening the wire.


Just let the wire lay loose/hanging from sheeve wheels.

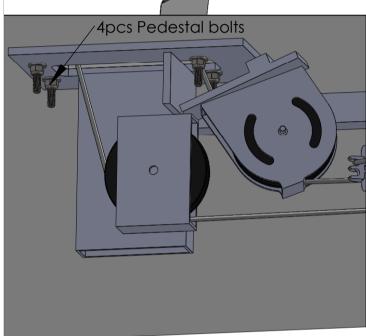

3)


Remove 4pcs Pedestal bolts 17mm key.

The pedestal doesn't fall because theres sikaflex between pedestal foot and cockpit floor.

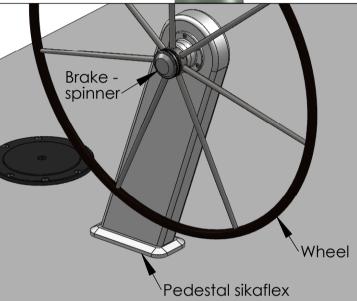

Dismount the brakespinner, then remove brass nut with 24mm wrench to dismount the wheel. Watch out for the key so you don't loose it.

Cut away sikaflex, with a sharp knife, at the base of the pedestal, till the pedestal is loose.

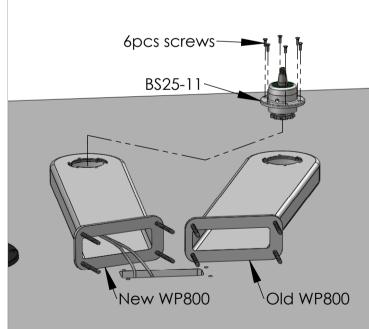


5)

Dismount the bulkhead steerer (BS25-11) by removing 6pcs 6mm screws with an 5mm allen key.

Take out the bulkhead steerer and move the wire/chain to the new pedestal and mount the bulkhead steerer in the new pedestal.


The chain should go around the sprocket on the bulkhead steerer.

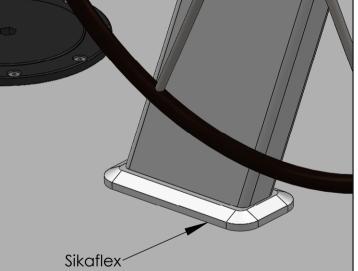

Before mounting the pedestal to the cockpit floor, it should be sealed with sikaflex.

Now mount the pedestal and fastening the 4pcs M10 bolts below deck.


Mount the wheel with the brass nut, and mount the brake spinner.

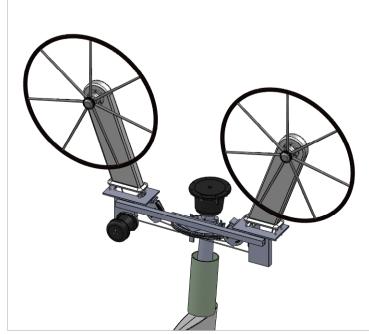

7)

Now change the other pedestal as in picture 3-6

Don't thighten the wire before both pedestals has been changed

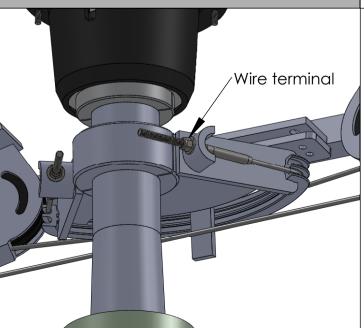

Tighten the wire on the quadrant.

Make sure the chain and wire is on wheels and sprockets as they should be.